


USER'S MANUAL

BLUETOOTH PRINTER

Step 1、 Insert Bluetooth adapter into the computer

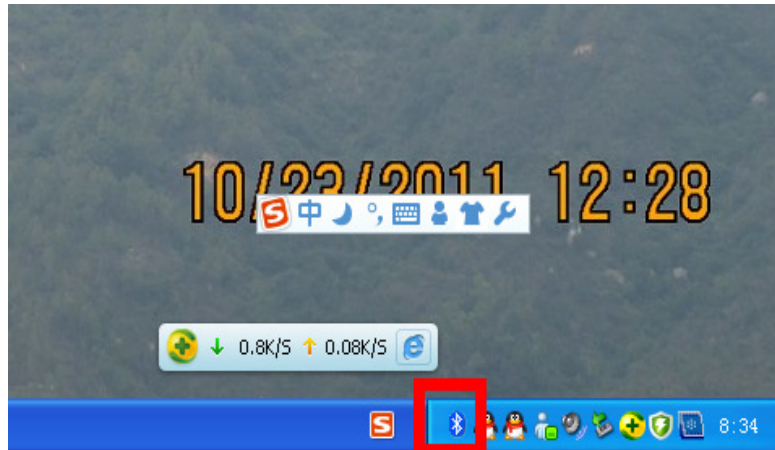


Step 2. Go to My computer---System Property ---Hardware ---Device Manager
you will find 'Bluetooth Radios'

The aboved two steps show Bluetooth device has been recognized on your computer.

Step 3. Go to Control panel – you will see 'Bluetooth device'

Step 4. Click and open the Bluetooth device dialog box


Click 'Add' as picture red color showing.

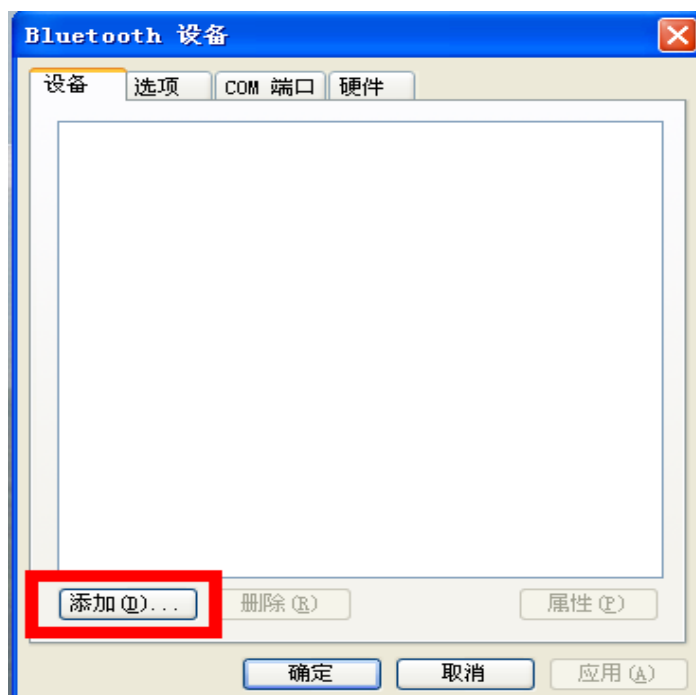

Step 5. Confirm GP-80160IIN connecting to the power and turned on, click next to continue.




Step 6. Now searching Bluetooth device.

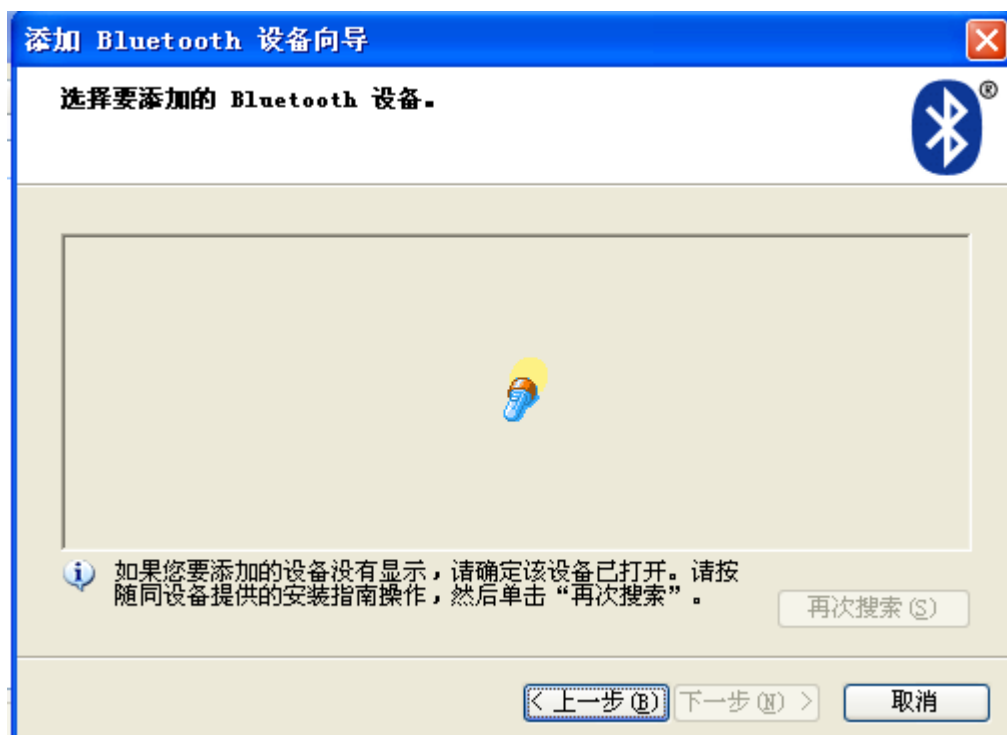


Step 7. Here show SPP-SLAVER new device, customer computer will show:

GPRINTER
New device


click 'Next' to continue

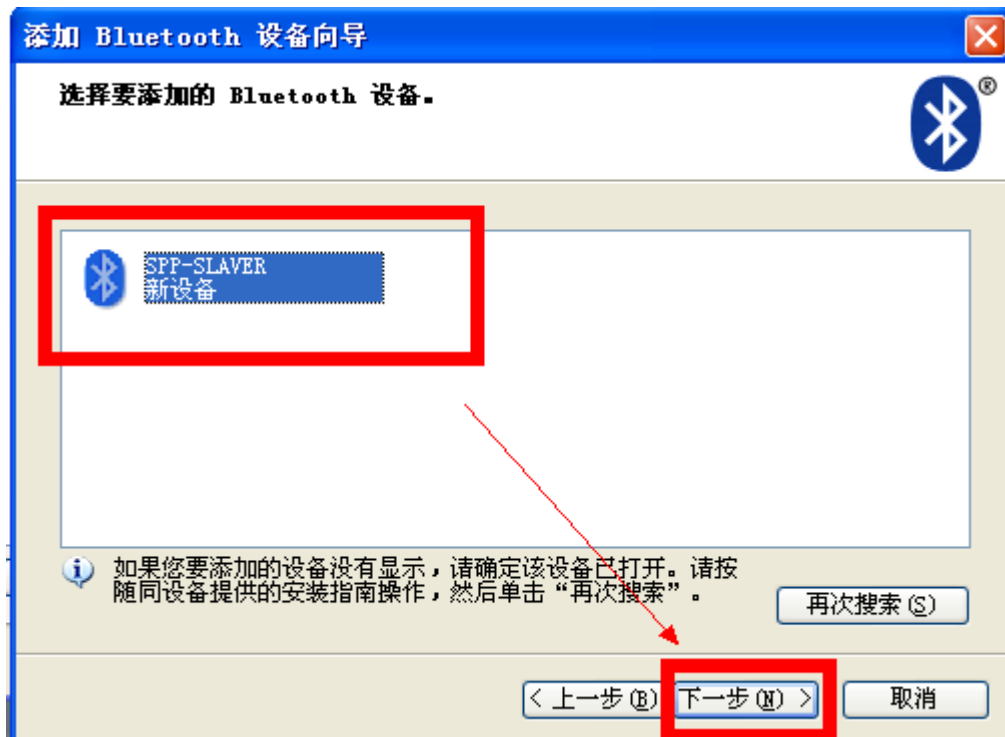

Step 8 Match password is 0000
Click 'Next' to continue.

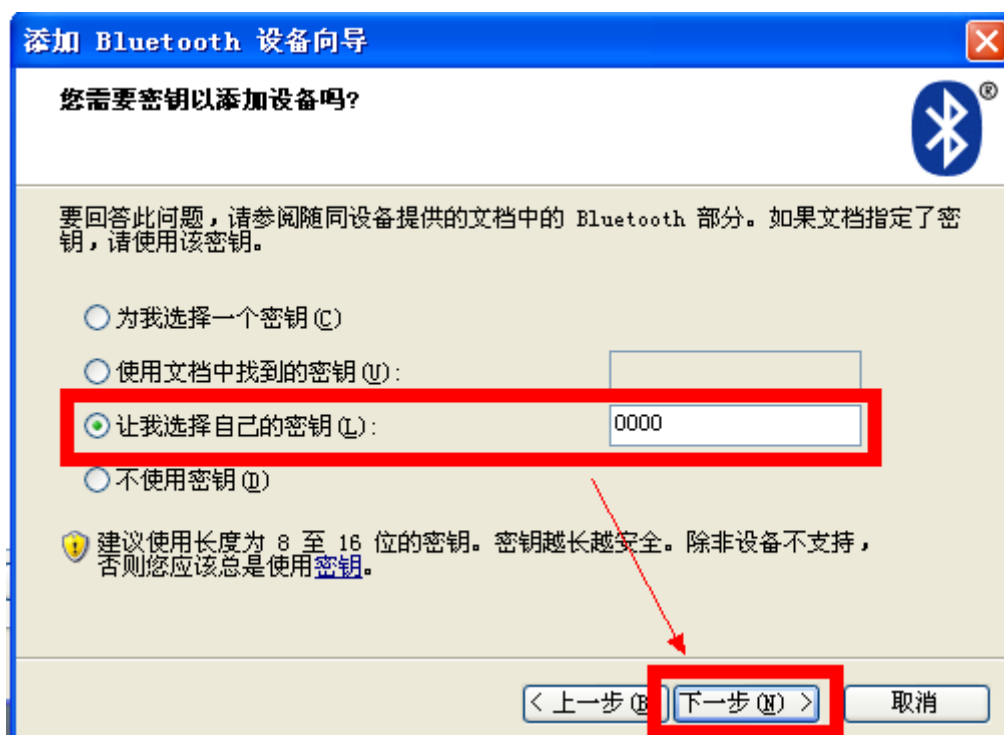


Step 9. Windows will check the password and connect, Bluetooth device will be matched successfully.

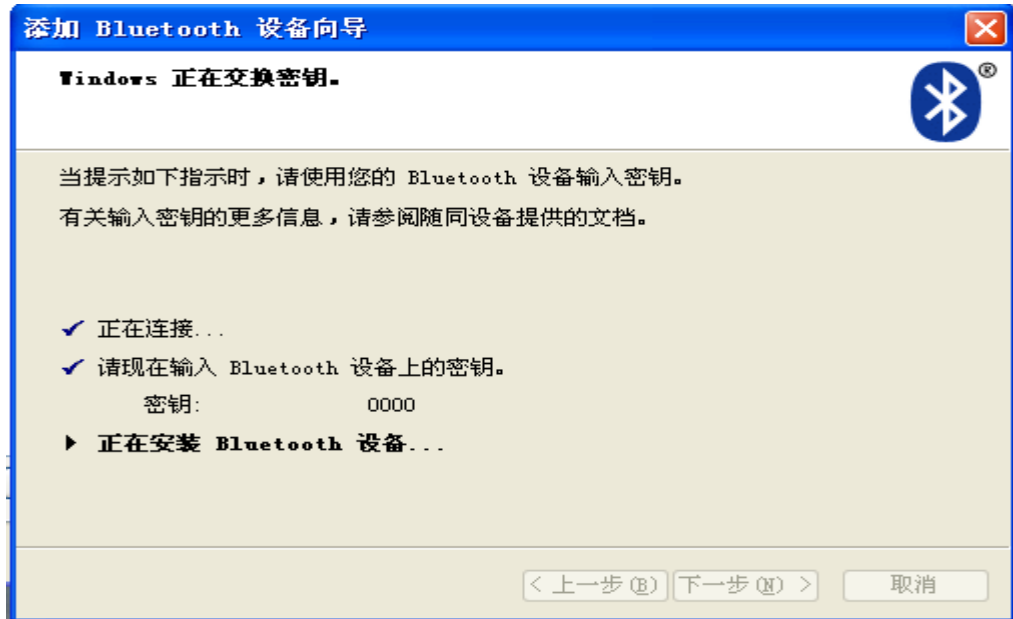

'Found new hardware' will prompt in computer bottom right.




In device manager, you will also find Bluetooth COM port.

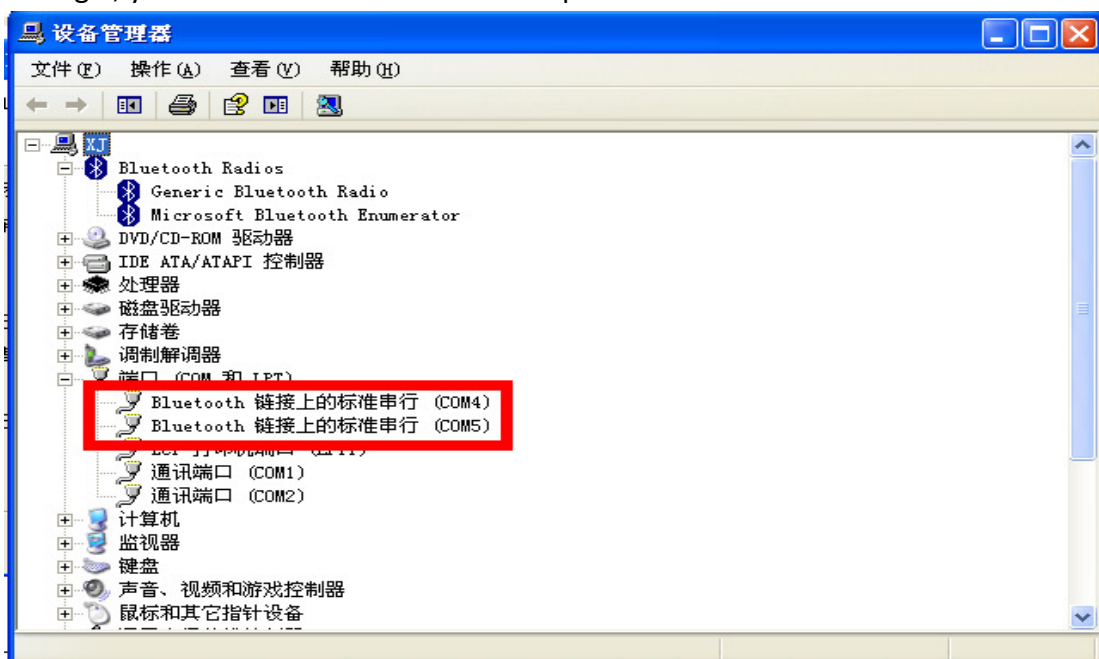


Step 10. After Bluetooth device matched, you will see two COM ports, click 'finish'
Here COM4 is the right port to be choosed in Step 13.




Step 11. Bluetooth Device dialog box, you can see SPP-SLAVER/GPRINTER in your computer.

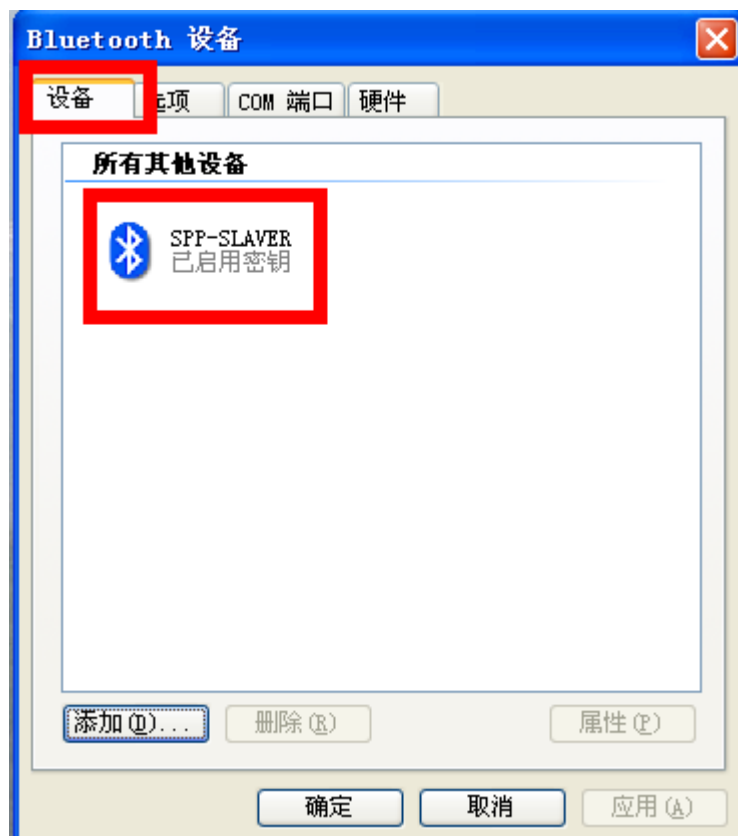


Step 12. Bluetooth Device dialog box—COM port--- COM4 & COM5 same as device manager

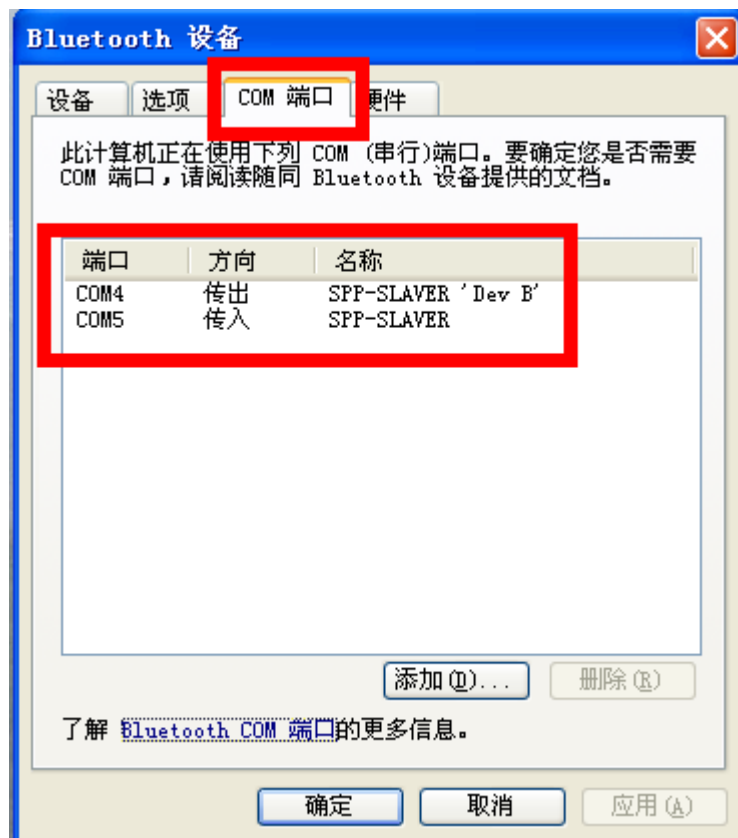

Step 13. Since Bluetooth is direction communication, here we choose COM4, signal comes out to GPRINTER. Go back to GP-80160IIN Property dialog box, choose COM4 serial port and Apply.

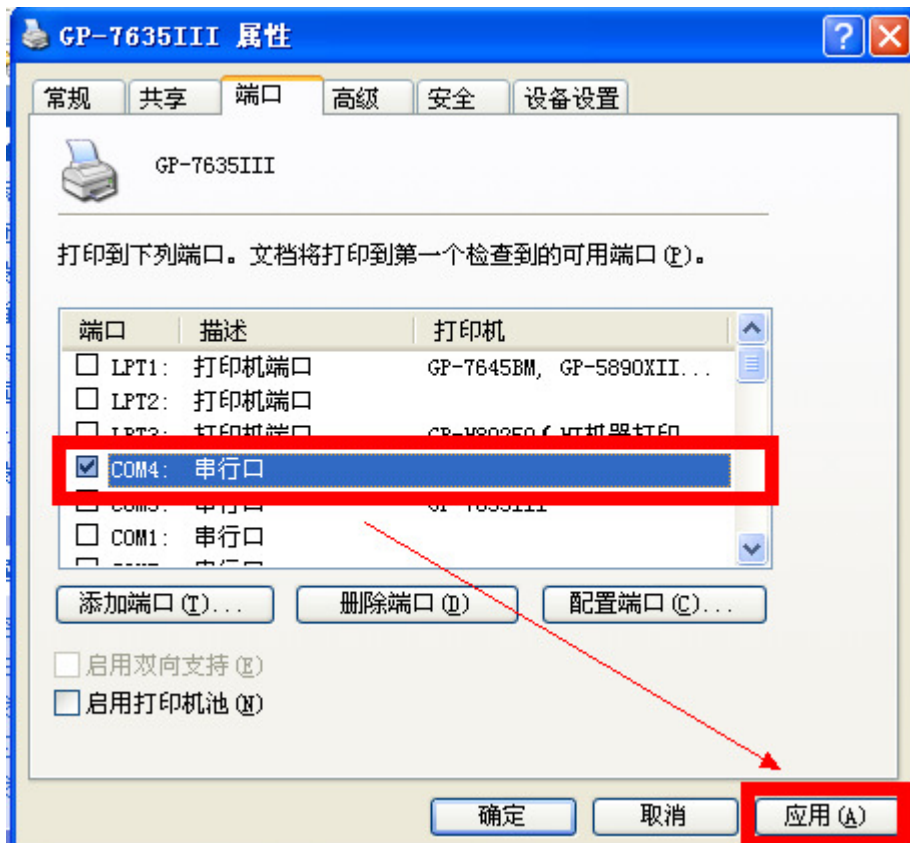

In General, Print test page, to confirm your Bluetooth printer connecting successfully.

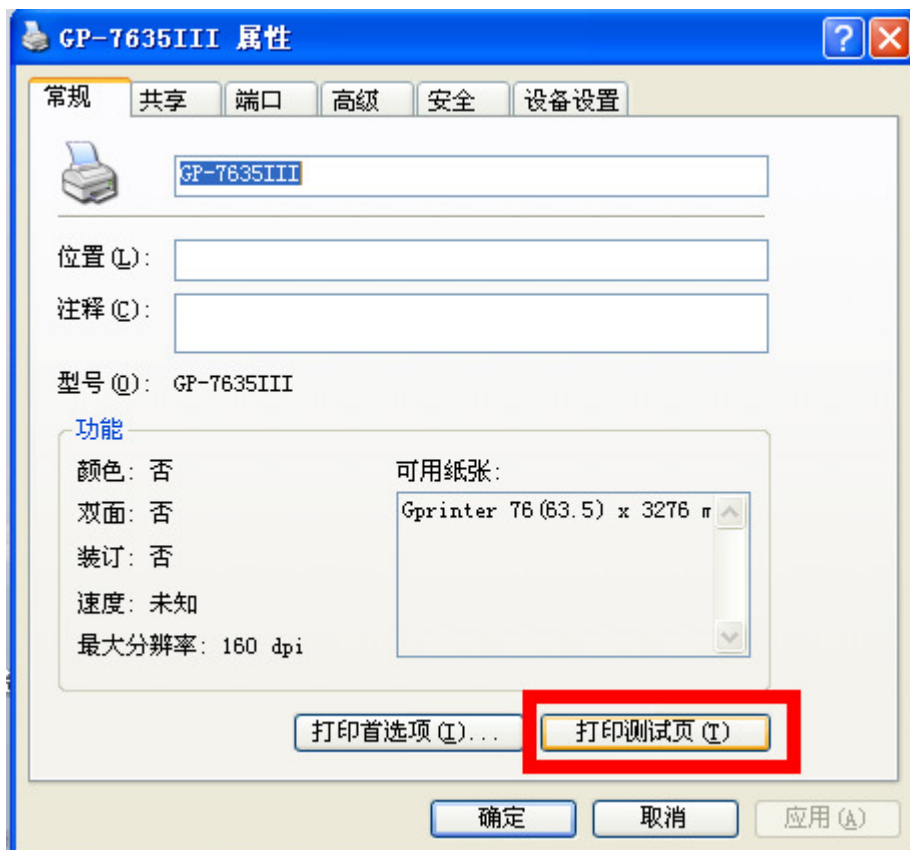

Thanks for choosing Gprinter!